

# Metrologic Programming Barcodes For Orbit and Voyager Scanners


#1  
Enter




#4  
Enable STX prefix




#2  
Recall Defaults

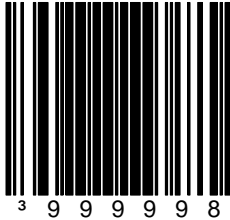


#5  
Disable CR

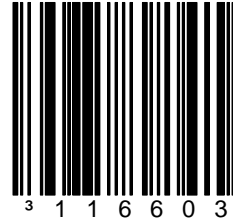

#3  
USB Defaults

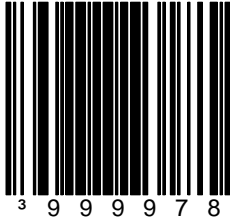


#6  
Disable LF

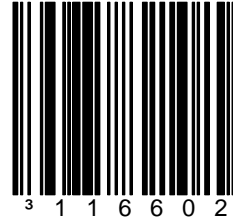


#7

Enable ETX Suffix

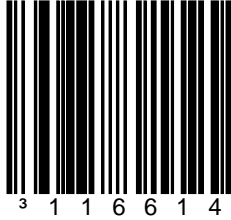

#8

Expand UPC-E

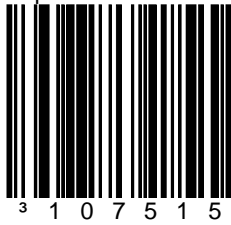

#9

Exit

